



## Safety / COSHH

### R35 Lightweight Horizontal Precast Concrete Wall Panels

#### Guidance For Safe Use In:

Check orientation of the panels. Most panels are designed to have the smoothest side facing the load. This is not always the case.

- Firewalls
- Warehouse Walls
- Security Walls
- Industrial Units

All panels to be installed as detailed in ACP (Concrete) Ltd installation instructions.

Concrete protection is recommended for all concrete surfaces that may come into contact with corrosive compounds.

#### Periodical Inspection

- Check all joints to ensure sealant is in good order.
- Check all concrete surfaces for signs of corrosion or mechanical damage. Carry out repairs if required using high strength epoxy mortar repair compound.
- Check all walls and floor slabs for cracks. If any are noticed, contact an engineer for investigation.
- Ensure clear access and operation of escape doors and that any warning notices are all in position and in good order.
- Check that the structure has been designed to be suit the material to be stored. Ensure operators are aware of maximum loading limits.

#### DISCLAIMER:

*Please note that any information provided is to be used as a guide only. Any lifting/handling operations should be carried out by trained and competent personnel only. ACP (Concrete) Limited will not be held responsible for any damage or injuries in connection with handling or installation not carried out by ACP (Concrete) Limited.*